



Installation Guide

Installation Kit: 911-6104-10



This installation guide covers various makes and models of equipment. See pages 2 & 3 for supported models

2WD/MFWD Tractors:

T7.200

TS135A

	Ca	se IH			John Deere	
				6100	7130 - Standard	8130
Maxxum 100	MXU		Puma 170	6105M	7200	8200
Maxxum 110		130 Value	Puma 175	6110	7200R	8210
Maxxum 115	MXU		Puma 180	6110M	7210	8220
Maxxum 120	-	m 270	Puma 185	6115M	7210R	8225R
Maxxum 125	-	m 300	Puma 195	6120	7215R	8230
Maxxum 130	Puma		Puma 200	6120M	7220	8235R
Maxxum 135	Puma		Puma 210	6125M	7230 - Standard	8245R
Maxxum 140	Puma		Puma 215	6130 - Standard	7230R	8260R
Maxxum 145	Puma		Puma 220	6130M	7250R	8270R
Maxxum 150	Puma		Puma 225	6140M	7260R	8285R
MXU100	Puma		Puma 230	6145M	7270R	8295R
MXU110	Puma		Puma 240	6150M	7280R	8300
MXU115	Puma		Puma 240	6155M	7290R	8310
MXU115 Value	Puma	165		6170M	7310R	8310R
				6175M	7320	8320
				6195M	7330 - Standard	8320R
	Vers	atile		6200	7400	8330
				6210	7410	8335R
	175	295		6220	7420	8345R
	195	310		6230 - Standard	7430 - Standard	8360R
	210 260	315		6300	7510	8370R
	265	335		6310	7520	8400
	290	360		6320	7600	8400R
	290			6330 - Standard	7610	8410
				6400	7630	8420
				6410	7700	8430
	New H	lolland		6420	7710	8520
T6.120		T7 210		6430 - Standard	7720	8530
		T7.210		6520	7730	
T6.140		T7.220		6534 - Premium	7800	
T6.145 T6.150		T7.230 T7.235		6600	7810	
		T7.245		6610	7820	
T6.155 T6.160		T7.245		6620	7830	
T6.165		T7.260		6800	7920	
T6.175		T7.270		6810	7930	
T6.180		T7.270		6820	8100	
T6020		T7.315		6910	8110	
T6030		T7030		6920	8120	
T6040		T7040				
T6050		T7050			Kubota	
T6060		T7060				
T6070		T7070			M8-191	
T6080		TS100A			M8-211	
T7.170		TS110A				
T7.175		TS115A				
T7.185		TS125A				
T7.190		TS123A				
17.190 T7.200		1313UA				

Articulated Tractors:

nn Deere
۱r

350 375* 400* 500+ 500DT 520 520DT	550 550DT 570 570DT 575+ 610 610DT	* first 3 digits of serial number must be 307 or higher + 2012 and newer models	9100 9120 9200 9220 9230 9300 9320 9330	9370R 9410R 9420 9420R 9430 9460R 9470R 9470RX	9520R 9520RX 9530 9560R 9570R 9570RX 9620R 9620RX
			9360R	9510R	9630

Swathers:

John Deere

W235 W260

Combines:

John Deere

S560	S770	T670*	
S660	S780	W540*	* 2012 and newer models
S670	S790	W550*	
S680	T550*	W650*	
S690	T560*	W660*	
S760	T660*		

Track Tractors:

John Deere

8100T	8230T	8400T	9320T	9510RT
8110T	8230T	8410T	9400T	9520RT
8120T	8295RT	8420T	9420T	9530T
8200T	8300T	8430T	9430T	9560RT
8210T	8310RT	8520T	9460RT	9570RT
8220T	8310T	9300T	9470RT	9630T

Sprayers:

John Deere

Introduction

The procedures outlined in this guide provide the basic installation procedure for the ESi² on the machines specified on the front cover of this guide. If you do not see your machine listed, contact customer support for further instruction. The kit components and corresponding install instructions are designated for each applicable machine make and model and may not be used on undesignated machine models.

Review Installation Kit Contents

Kit contents are outlined in the ESi² installation section on pages 10 and 11. Read all applicable installation instructions for your machine's model and ensure that all required kit components are present before beginning the installation.

NOTE: Due to manufacturing processes outside of Outback Guidance's control, the installer may have to adapt this kit to your distinct situation.

Read and Follow All Safety Messages

- Refer to the safety manual for the machine that the ESi² is being installed on for operating age and precautions.
- Prior to installing and operating the ESi², read and understand all safety precautions as outlined in this guide
- Store this guide and all related safety information with related machine manuals for future reference.

Safety Information and Warnings*

- ESi² is NOT designed to replace the machine's operator and is designed as a driving aid for use in precision agriculture applications.
- ESi² is NOT intended for use on roadways and should remain disengaged at all times when traveling on roadways.
- ESi² does NOT control the speed of the machine and a human operator is required to manually maintain a safe operating speed.
- ESi² does NOT avoid obstacles. To prevent human, machine and property injury a human operator is required to operate the machine at all times.
- Do NOT allow anyone to operate without instructions.
- At all times the driver is fully responsible for the safe operation of the vehicle.

^{*} The safety warnings contained in this installation guide are not meant to be an exhaustive list of potential hazards.

Introduction

- To ensure peak performance, ESi² should only be installed after a thorough machine inspection has been conducted. The contents of this kit and ESi² are not intended to replace preventative and or needed maintenance. To avoid bodily and machine injury, follow the machine preparation checklist below:
 - ⇒ Inspect steering linkage: Machine should drive in a straight line without manual correction
 - ⇒ Turn off machine and power-off all electronic gauges, monitors and external devices when installing or performing maintenance on the ESi²
 - ⇒ Park machine on a clean and level surface
 - ⇒ Lower all implements and headers to the ground
 - ⇒ Apply the parking break and chock wheels
 - ⇒ Inspect any drilling and/or cutting sites to ensure no electrical wiring damage will be incurred

Install Guide Index

This installation guide covers multiple machine types. Refer to the index below to find the section that applies to your machine.

Install #1

John Deere R series Tractors

For machine specific installation instructions start at page 8.



Install #2

John Deere Combines and Swathers

For machine specific installation instructions start at page 14.



Install #3

John Deere 7000, 8000 & 9000 series tractors and 4000 series sprayers

For machine specific installation instructions start at page 20.



Install #4

John Deere Tractors with Left-Hand reversers

For machine specific installation instructions start at page 26.



John Deere 6000, 6000M, and 7000 2WD/MFWD tractors

For machine specific installation instructions start at page 32.



Install #6

Case IH and New Holland 2WD/MFWD tractors

For machine specific installation instructions start at page 38.



Install #7

Versatile MFWD & Articulated Tractors

For machine specific installation instructions start at page 44.



Install #8

Versatile Nemesis and Kubota M8 MFWD Tractors


For machine specific installation instructions start at page 50.



John Deere R series Tractors

Remove the steering wheel center cap and the nut holding the telescoping actuator knob on the shaft.

SAVE the nut as it will be used later in this installation.

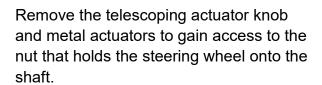

Remove and **SAVE** this nut as it will be used later in this installation.

Following the manufacturer's recommended procedure remove the steering wheel.

NOTE: Consult your equipment dealer if you are unsure of the correct procedure for removing the steering wheel.







Steering column is ready for ESi² installation.



John Deere R series Tractors

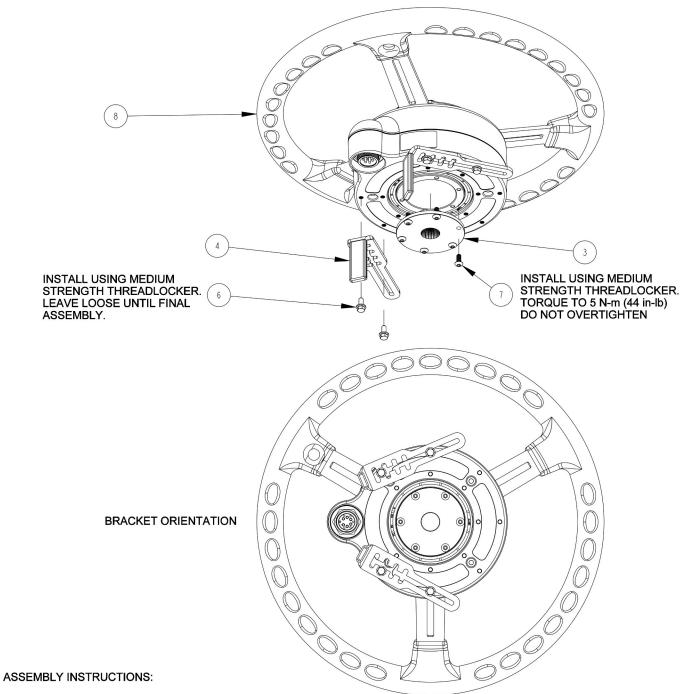

- 1. PRE-ASSEMBLE SPLINE ADAPTER AND BRACKETS TO WHEEL MOTOR.
- 2. PLACE ASSEMBLY ON STEERING SHAFT AND RE-INSTALL STEERING SHAFT NUT.
- 3. ADJUST BRACKETS TO FIT SNUG AGAINST THE STEERING COLUMN.
- 4. TIGHTEN SCREWS ATTACHING BRACKETS TO BOTTOM OF MOTOR.
 TORQUE TO 5 N-m (44 in-lb). DO NOT OVERTIGHTEN.
 ENSURE THAT THE ANTI-ROTATION BRACKETS DO NOT CONTACT THE SPLINE ADAPTER.
 ENSURE THAT THE MOTOR DOES NOT MOVE IN RELATION TO THE STEERING COLUMN.
- 5. ASSEMBLE TELESCOPING ACTUATOR COMPONENTS.
- 6. ROTATE THE WHEEL A FULL TURN TO ENSURE THERE IS NO INTERFERENCE BETWEEN THE BRACKETS AND SPLINE ADAPTER, OR ANY MOVING PARTS AND MACHINE CONTROLS.

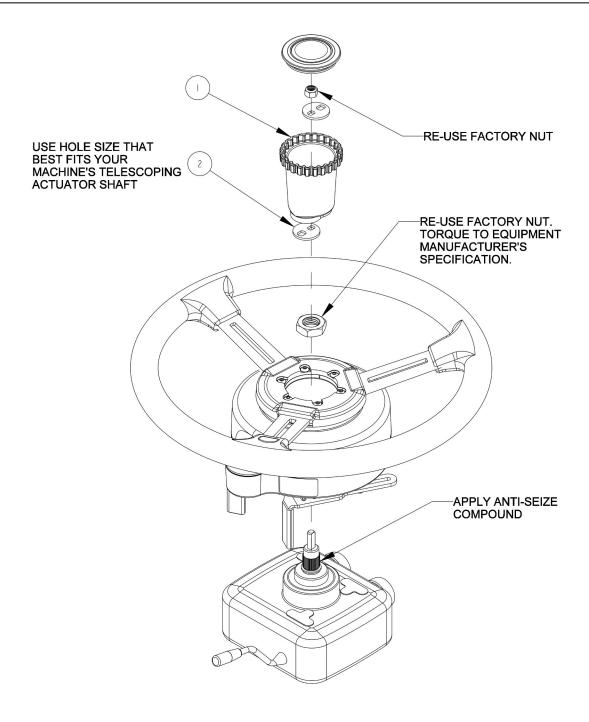

ITEM	QTY	PART NUMBER	DESCRIPTION	NOTES
1	1	600-1486-01	TELESCOPING ACTUATOR KNOB	
2	2	601-1290-01	TELESCOPING ACTUATOR PLATE	
3	1	604-0074-10	SPLINE ADAPTER- ESI2, 36T x .875 MAJOR x .180/.870 OFFSET	
4	2	640-0184-01	ANTI-ROTATION BRACKET	
5	1	675-0126-000	LOCTITE 242 MEDIUM STRENGTH THREADLOCKER	NOT SHOWN
6	4	675-1345-10	SCREW, M5-0.8 X 12MM, HEX FLANGE	
7	6	675-1351-10	SCREW, M5-0.8 X 12MM, BUTTON HEAD	
8	1	910-4024-10	ESI2 ELECTRIC STEERING WHEEL	

ESi² wheel successfully installed.

Continue to page 49 to complete the installation.





John Deere Combines and Swathers

Remove the steering wheel center cap and the nut holding the telescoping actuator knob on the shaft.

SAVE the nut as it will be used later in this installation.

Remove the telescoping actuator knob and actuator plates to gain access to the nut that holds the steering wheel onto the shaft.

Save the actuator plates as they will be used later in this installation



Remove and **SAVE** the nut that holds the steering wheel onto the shaft as it will be used later in this installation.

Following the manufacturer's recommended procedure remove the steering wheel.


NOTE: Consult your equipment dealer if you are unsure of the correct procedure for removing the steering wheel.




Steering column is ready for ESi² installation.



John Deere Combines and Swathers

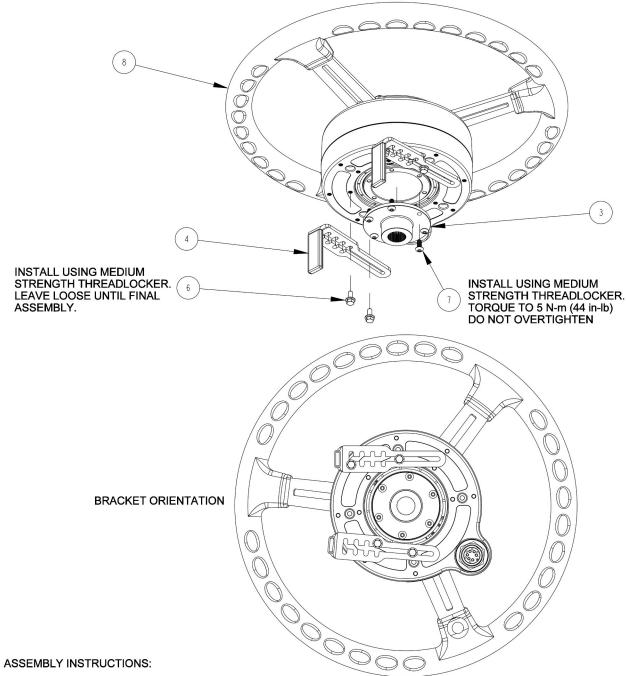

- 1. PRE-ASSEMBLE SPLINE ADAPTER AND BRACKETS TO WHEEL MOTOR.
- 2. PLACE ASSEMBLY ON STEERING SHAFT AND RE-INSTALL STEERING SHAFT NUT.
- 3. ADJUST BRACKETS TO FIT SNUG AGAINST THE STEERING COLUMN.
- 4. TIGHTEN SCREWS ATTACHING BRACKETS TO BOTTOM OF MOTOR. TORQUE TO 5 N-m (44 in-lb). DO NOT OVERTIGHTEN. ENSURE THAT THE ANTI-ROTATION BRACKETS DO NOT CONTACT THE SPLINE ADAPTER. ENSURE THAT THE MOTOR DOES NOT MOVE IN RELATION TO THE STEERING COLUMN.
- 5. ASSEMBLE TELESCOPING ACTUATOR COMPONENTS.
- 6. ROTATE THE WHEEL A FULL TURN TO ENSURE THERE IS NO INTERFERENCE BETWEEN THE BRACKETS AND SPLINE ADAPTER, OR ANY MOVING PARTS AND MACHINE CONTROLS.

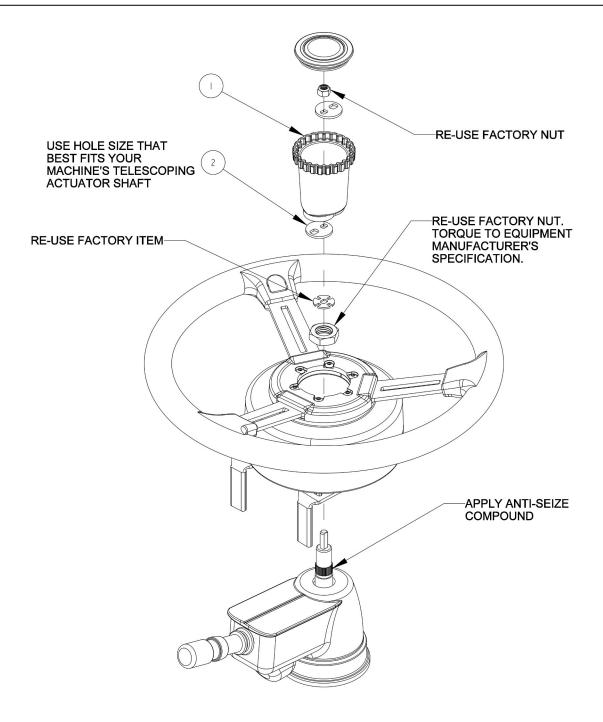

ITEM	QTY	PART NUMBER	DESCRIPTION	NOTES
1	1	600-1486-01	TELESCOPING ACTUATOR KNOB	
2	2	601-1290-01	TELESCOPING ACTUATOR PLATE	
3	1	604-0074-10	SPLINE ADAPTER- ESI2, 36T x .875 MAJOR x .180/.870 OFFSET	
4	2	640-0184-01	ANTI-ROTATION BRACKET	
5	1	675-0126-000	LOCTITE 242 MEDIUM STRENGTH THREADLOCKER	NOT SHOWN
6	4	675-1345-10	SCREW, M5-0.8 X 12MM, HEX FLANGE	
7	6	675-1351-10	SCREW, M5-0.8 X 12MM, BUTTON HEAD	
8	1	910-4024-10	ESI2 ELECTRIC STEERING WHEEL	

ESi² wheel successfully installed.

Continue to page 49 to complete the installation.





John Deere 7000, 8000 & 9000 series tractors and 4000 series sprayers

Remove the steering wheel center cap and the nut holding the telescoping actuator knob on the shaft.

SAVE the nut as it will be used later in this installation.

Remove the telescoping actuator knob and actuator plates to gain access to the nut that holds the steering wheel onto the shaft.

Remove and **SAVE** this nut as it will be used later in this installation.

Following the manufacturer's recommended procedure remove the steering wheel.

NOTE: Consult your equipment dealer if you are unsure of the correct procedure for removing the steering wheel.






Steering column is ready for ESi² installation.




John Deere 7000, 8000 & 9000 series tractors and 4000 series sprayers

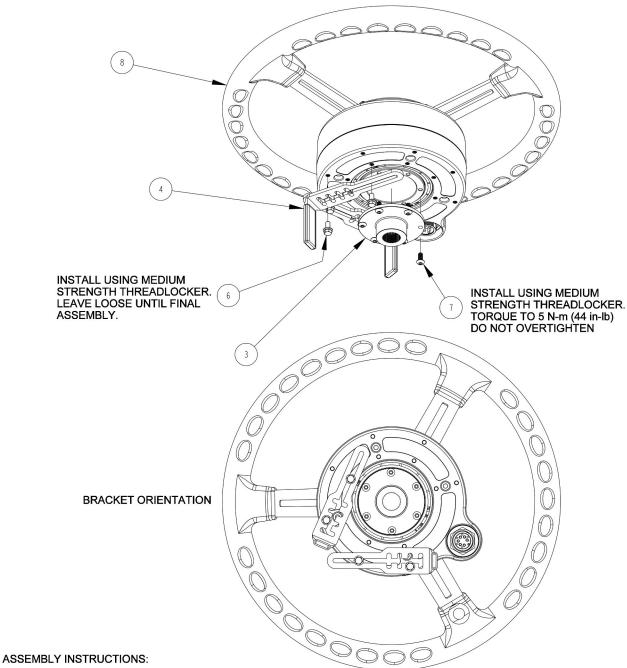

- 1. PRE-ASSEMBLE SPLINE ADAPTER AND BRACKETS TO WHEEL MOTOR.
- 2. PLACE ASSEMBLY ON STEERING SHAFT AND RE-INSTALL STEERING SHAFT NUT.
- 3. ADJUST BRACKETS TO FIT SNUG AGAINST THE STEERING COLUMN.
- 4. TIGHTEN SCREWS ATTACHING BRACKETS TO BOTTOM OF MOTOR. TORQUE TO 5 N-m (44 in-lb). DO NOT OVERTIGHTEN. ENSURE THAT THE ANTI-ROTATION BRACKETS DO NOT CONTACT THE SPLINE ADAPTER. ENSURE THAT THE MOTOR DOES NOT MOVE IN RELATION TO THE STEERING COLUMN.
- 5. ASSEMBLE TELESCOPING ACTUATOR COMPONENTS.
- 6. ROTATE THE WHEEL A FULL TURN TO ENSURE THERE IS NO INTERFERENCE BETWEEN THE BRACKETS AND SPLINE ADAPTER, OR ANY MOVING PARTS AND MACHINE CONTROLS.

John Deere 7000, 8000 & 9000 series tractors and 4000 series sprayers

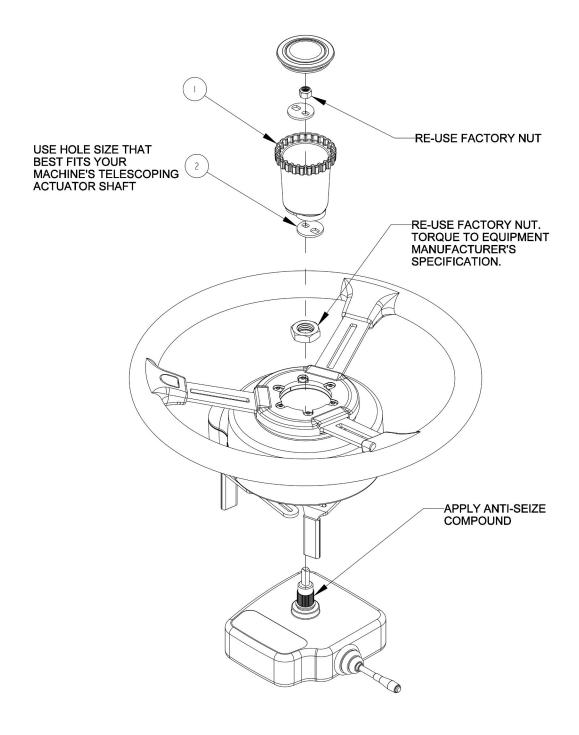

ITEM	QTY	PART NUMBER	DESCRIPTION	NOTES
1	1	600-1486-01	TELESCOPING ACTUATOR KNOB	
2	2	601-1290-01	TELESCOPING ACTUATOR PLATE	
3	1	604-0074-10	SPLINE ADAPTER- ESI2, 36T x .875 MAJOR x .180/.870 OFFSET	
4	2	640-0184-01	ANTI-ROTATION BRACKET	
5	1	675-0126-000	LOCTITE 242 MEDIUM STRENGTH THREADLOCKER	NOT SHOWN
6	4	675-1345-10	SCREW, M5-0.8 X 12MM, HEX FLANGE	
7	6	675-1351-10	SCREW, M5-0.8 X 12MM, BUTTON HEAD	
8	1	910-4024-10	ESI2 ELECTRIC STEERING WHEEL	

ESi² wheel successfully installed.

Continue to page 49 to complete the installation.





John Deere Tractors with Left-Hand reversers

Remove the steering wheel center cap and the nut holding the telescoping actuator knob on the shaft.

SAVE the nut as it will be used later in this installation.

Remove the telescoping actuator knob and actuator plates to gain access to the nut that holds the steering wheel onto the shaft.

Remove and **SAVE** this nut as it will be used later in this installation.

Following the manufacturer's recommended procedure remove the steering wheel.

NOTE: Consult your equipment dealer if you are unsure of the correct procedure for removing the steering wheel.






John Deere Tractors with Left-Hand reversers


Steering column is ready for ESi² installation.



John Deere Tractors with Left-Hand reversers

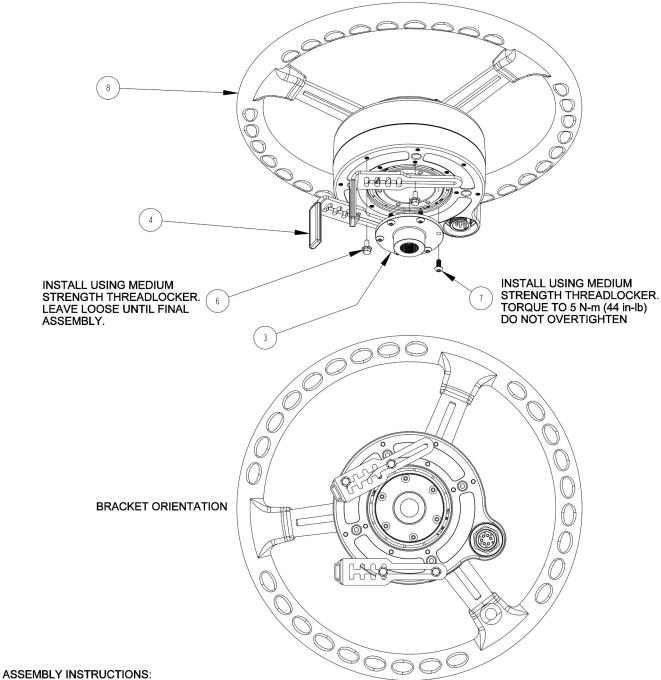

- 1. PRE-ASSEMBLE SPLINE ADAPTER AND BRACKETS TO WHEEL MOTOR.
- 2. PLACE ASSEMBLY ON STEERING SHAFT AND RE-INSTALL STEERING SHAFT NUT.
- 3. ADJUST BRACKETS TO FIT SNUG AGAINST THE STEERING COLUMN.
- 4. TIGHTEN SCREWS ATTACHING BRACKETS TO BOTTOM OF MOTOR. TORQUE TO 5 N-m (44 in-lb). DO NOT OVERTIGHTEN. ENSURE THAT THE ANTI-ROTATION BRACKETS DO NOT CONTACT THE SPLINE ADAPTER. ENSURE THAT THE MOTOR DOES NOT MOVE IN RELATION TO THE STEERING COLUMN.
- 5. ASSEMBLE TELESCOPING ACTUATOR COMPONENTS.
- 6. ROTATE THE WHEEL A FULL TURN TO ENSURE THERE IS NO INTERFERENCE BETWEEN THE BRACKETS AND SPLINE ADAPTER, OR ANY MOVING PARTS AND MACHINE CONTROLS.

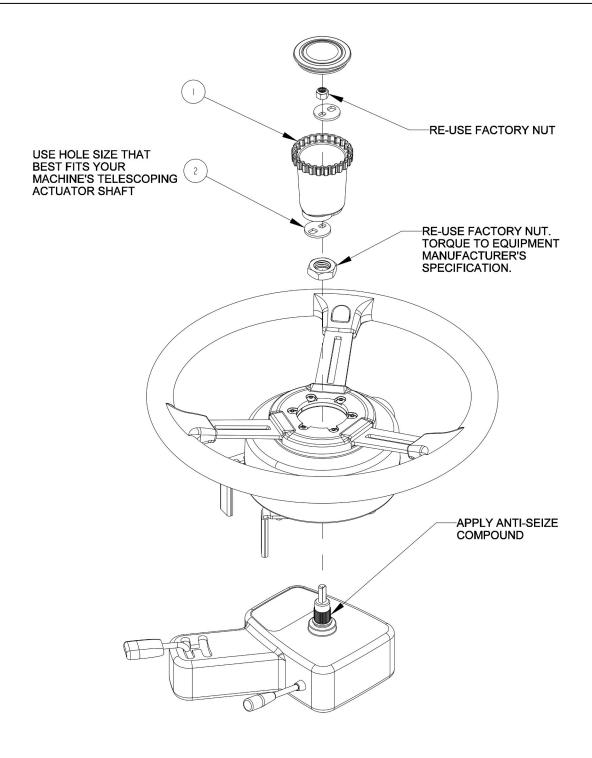

ITEM	QTY	PART NUMBER	DESCRIPTION	NOTES
1	1	600-1486-01	TELESCOPING ACTUATOR KNOB	
2	2	601-1290-01	TELESCOPING ACTUATOR PLATE	
3	1	604-0074-10	SPLINE ADAPTER- ESI2, 36T x .875 MAJOR x .180/.870 OFFSET	
4	2	640-0184-01	ANTI-ROTATION BRACKET	
5	1	675-0126-000	LOCTITE 242 MEDIUM STRENGTH THREADLOCKER	NOT SHOWN
6	4	675-1345-10	SCREW, M5-0.8 X 12MM, HEX FLANGE	
7	6	675-1351-10	SCREW, M5-0.8 X 12MM, BUTTON HEAD	
8	1	910-4024-10	ESI2 ELECTRIC STEERING WHEEL	

ESi² wheel successfully installed.

Continue to page 49 to complete the installation.





John Deere 6000, 6000M, and 7000 2WD/MFWD tractors

Remove the steering wheel center cap and the nut holding the telescoping actuator knob on the shaft.

SAVE the nut as it will be used later in this installation.

Remove the telescoping actuator knob and actuator plates to gain access to the nut that holds the steering wheel onto the shaft.

Save the actuator plates as they will be used later in this installation

Remove and **SAVE** the nut that holds the steering wheel onto the shaft as it will be used later in this installation.

Following the manufacturer's recommended procedure remove the steering wheel.

NOTE: Consult your equipment dealer if you are unsure of the correct procedure for removing the steering wheel.






Steering column is ready for ESi² installation.




John Deere 6000, 6000M, and 7000 2WD/MFWD tractors

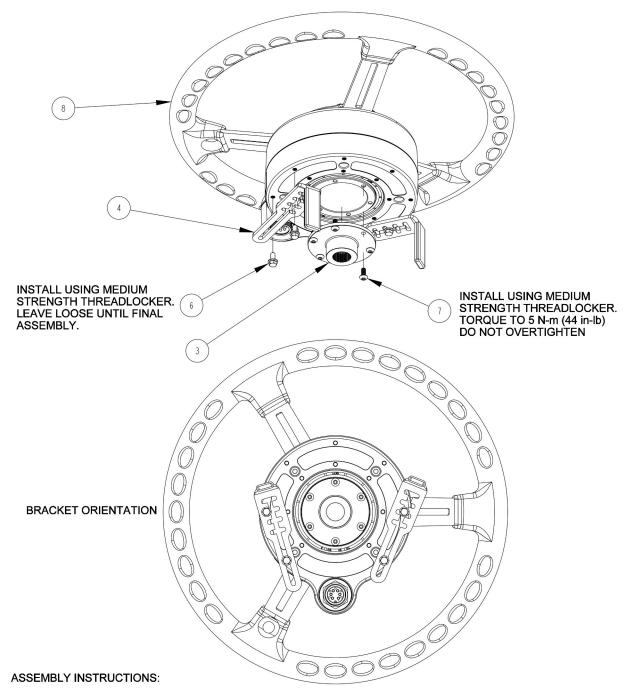

- 1. PRE-ASSEMBLE SPLINE ADAPTER AND BRACKETS TO WHEEL MOTOR.
- 2. PLACE ASSEMBLY ON STEERING SHAFT AND RE-INSTALL STEERING SHAFT NUT.
- 3. ADJUST BRACKETS TO FIT SNUG AGAINST THE STEERING COLUMN.
- 4. TIGHTEN SCREWS ATTACHING BRACKETS TO BOTTOM OF MOTOR.
 TORQUE TO 5 N-m (44 in-lb). DO NOT OVERTIGHTEN.
 ENSURE THAT THE ANTI-ROTATION BRACKETS DO NOT CONTACT THE SPLINE ADAPTER.
 ENSURE THAT THE MOTOR DOES NOT MOVE IN RELATION TO THE STEERING COLUMN.
- 5. ASSEMBLE TELESCOPING ACTUATOR COMPONENTS.
- 6. ROTATE THE WHEEL A FULL TURN TO ENSURE THERE IS NO INTERFERENCE BETWEEN THE BRACKETS AND SPLINE ADAPTER, OR ANY MOVING PARTS AND MACHINE CONTROLS.

John Deere 6000, 6000M, and 7000 2WD/MFWD tractors

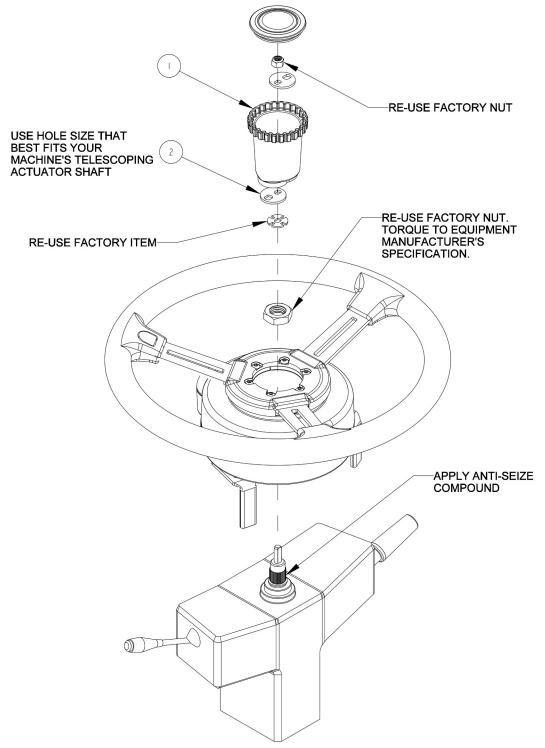

ITEM	OTY	PART NUMBER	DESCRIPTION	NOTES
1		600-1486-01	TELESCOPING ACTUATOR KNOB	110125
2	2	601-1290-01	TELESCOPING ACTUATOR PLATE	
3	1	604-0074-10	SPLINE ADAPTER- ESI2, 36T x .875 MAJOR x .180/.870 OFFSET	
4	2	640-0184-01	ANTI-ROTATION BRACKET	
5	1	675-0126-000	LOCTITE 242 MEDIUM STRENGTH THREADLOCKER	NOT SHOWN
6	4	675-1345-10	SCREW, M5-0.8 X 12MM, HEX FLANGE	
7	6	675-1351-10	SCREW, M5-0.8 X 12MM, BUTTON HEAD	
8	1	910-4024-10	ESI2 ELECTRIC STEERING WHEEL	

ESi² wheel successfully installed.

Continue to page 49 to complete the installation.





Remove the steering wheel center cap and the nut holding the telescoping actuator knob on the shaft.

SAVE the nut as it will be used later in this installation.



Remove the telescoping actuator knob to gain access to the nut that holds the steering wheel onto the shaft.

Remove and **SAVE** this nut as it will be used later in this installation.

Following the manufacturer's recommended procedure, remove the steering wheel.

NOTE: Consult your equipment dealer if you are unsure of the correct procedure for removing the steering wheel.




Install #6

Case IH and New Holland 2WD/MFWD tractors

Steering column is ready for ESi² installation.




Case IH and New Holland 2WD/MFWD tractors

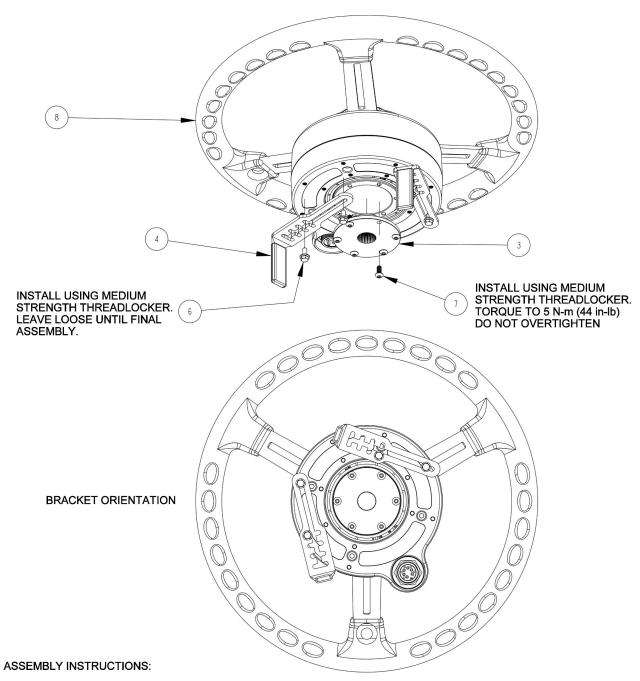

- 1. PRE-ASSEMBLE SPLINE ADAPTER AND BRACKETS TO WHEEL MOTOR.
- 2. PLACE ASSEMBLY ON STEERING SHAFT AND RE-INSTALL STEERING SHAFT NUT.
- 3. ADJUST BRACKETS TO FIT SNUG AGAINST THE STEERING COLUMN.
- 4. TIGHTEN SCREWS ATTACHING BRACKETS TO BOTTOM OF MOTOR.
 TORQUE TO 5 N-m (44 in-lb). DO NOT OVERTIGHTEN.
 ENSURE THAT THE ANTI-ROTATION BRACKETS DO NOT CONTACT THE SPLINE ADAPTER.
 ENSURE THAT THE MOTOR DOES NOT MOVE IN RELATION TO THE STEERING COLUMN.
- 5. ASSEMBLE TELESCOPING ACTUATOR COMPONENTS.
- 6. ROTATE THE WHEEL A FULL TURN TO ENSURE THERE IS NO INTERFERENCE BETWEEN THE BRACKETS AND SPLINE ADAPTER, OR ANY MOVING PARTS AND MACHINE CONTROLS.

Case IH and New Holland 2WD/MFWD tractors

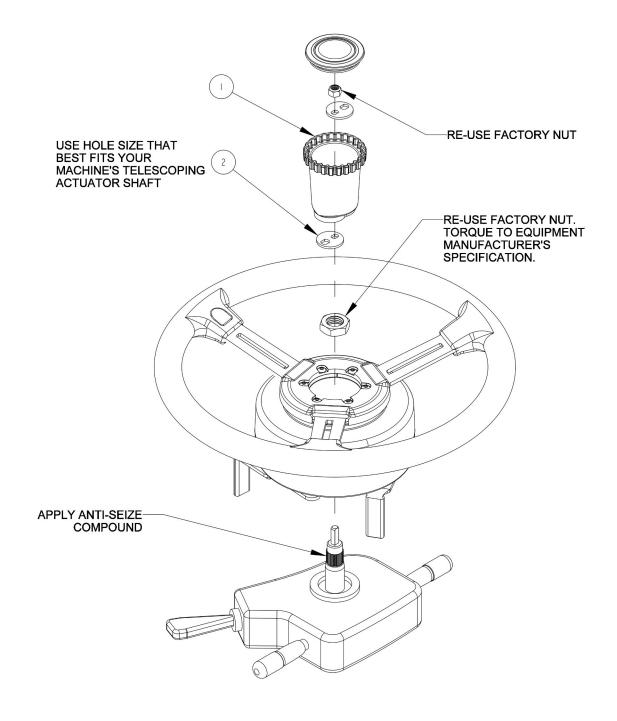

ITEM	QTY	PART NUMBER	DESCRIPTION	NOTES
1	1	600-1486-01	TELESCOPING ACTUATOR KNOB	
2	2	601-1290-01	TELESCOPING ACTUATOR PLATE	
3	1	604-0074-10	SPLINE ADAPTER- ESI2, 36T x .875 MAJOR x .180/.870 OFFSET	
4	2	640-0184-01	ANTI-ROTATION BRACKET	
5	1	675-0126-000	LOCTITE 242 MEDIUM STRENGTH THREADLOCKER	NOT SHOWN
6	4	675-1345-10	SCREW, M5-0.8 X 12MM, HEX FLANGE	
7	6	675-1351-10	SCREW, M5-0.8 X 12MM, BUTTON HEAD	
8	1	910-4024-10	ESI2 ELECTRIC STEERING WHEEL	

Case IH and New Holland 2WD/MFWD tractors

ESi² wheel successfully installed.

Continue to page 49 to complete the installation.





Remove the steering wheel center cap and the nut holding the telescoping actuator knob on the shaft.

SAVE the nut as it will be used later in this installation.



Remove the telescoping actuator knob to gain access to the nut that holds the steering wheel onto the shaft.

Remove and **SAVE** this nut as it will be used later in this installation.

Following the manufacturer's recommended procedure, remove the steering wheel.


NOTE: Consult your equipment dealer if you are unsure of the correct procedure for removing the steering wheel.



Steering column is ready for ESi² installation.




Versatile MFWD & Articulated Tractors

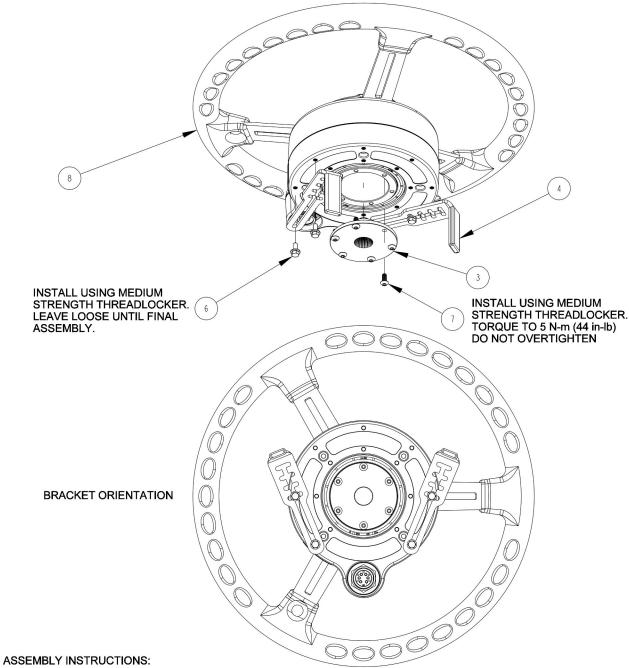

- 1. PRE-ASSEMBLE SPLINE ADAPTER AND BRACKETS TO WHEEL MOTOR.
- 2. PLACE ASSEMBLY ON STEERING SHAFT AND RE-INSTALL STEERING SHAFT NUT.
- 3. ADJUST BRACKETS TO FIT SNUG AGAINST THE STEERING COLUMN.
- 4. TIGHTEN SCREWS ATTACHING BRACKETS TO BOTTOM OF MOTOR. TORQUE TO 5 N-m (44 in-lb). DO NOT OVERTIGHTEN. ENSURE THAT THE ANTI-ROTATION BRACKETS DO NOT CONTACT THE SPLINE ADAPTER. ENSURE THAT THE MOTOR DOES NOT MOVE IN RELATION TO THE STEERING COLUMN.
- 5. ASSEMBLE TELESCOPING ACTUATOR COMPONENTS.
- 6. ROTATE THE WHEEL A FULL TURN TO ENSURE THERE IS NO INTERFERENCE BETWEEN THE BRACKETS AND SPLINE ADAPTER, OR ANY MOVING PARTS AND MACHINE CONTROLS.

Versatile MFWD & Articulated Tractors

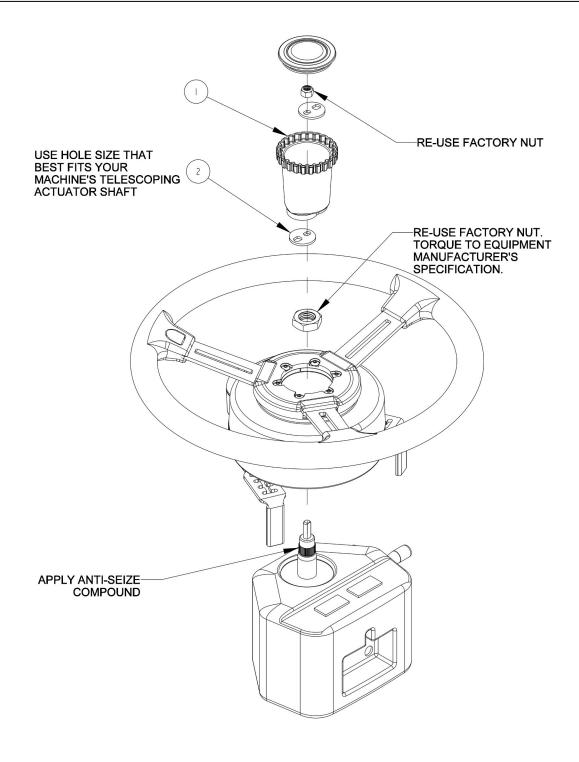

ITEM	QTY	PART NUMBER	DESCRIPTION	NOTES
1	1	600-1486-01	TELESCOPING ACTUATOR KNOB	
2	2	601-1290-01	TELESCOPING ACTUATOR PLATE	
3	1	604-0074-10	SPLINE ADAPTER- ESI2, 36T x .875 MAJOR x .180/.870 OFFSET	
4	2	640-0184-01	ANTI-ROTATION BRACKET	
5	1	675-0126-000	LOCTITE 242 MEDIUM STRENGTH THREADLOCKER	NOT SHOWN
6	4	675-1345-10	SCREW, M5-0.8 X 12MM, HEX FLANGE	
7	6	675-1351-10	SCREW, M5-0.8 X 12MM, BUTTON HEAD	
8	1	910-4024-10	ESI2 ELECTRIC STEERING WHEEL	

ESi² wheel successfully installed.

Continue to page 49 to complete the installation.





Remove the steering wheel center cap and the nut holding the telescoping actuator knob on the shaft.

SAVE the nut as it will be used later in this installation.



Remove the telescoping actuator knob to gain access to the nut that holds the steering wheel onto the shaft.

Remove and **SAVE** this nut as it will be used later in this installation.

Following the manufacturer's recommended procedure, remove the steering wheel.

NOTE: Consult your equipment dealer if you are unsure of the correct procedure for removing the steering wheel.




Versatile Nemesis and Kubota M8 MFWD Tractors

Steering column is ready for ESi² installation.




Versatile Nemesis and Kubota M8 MFWD Tractors

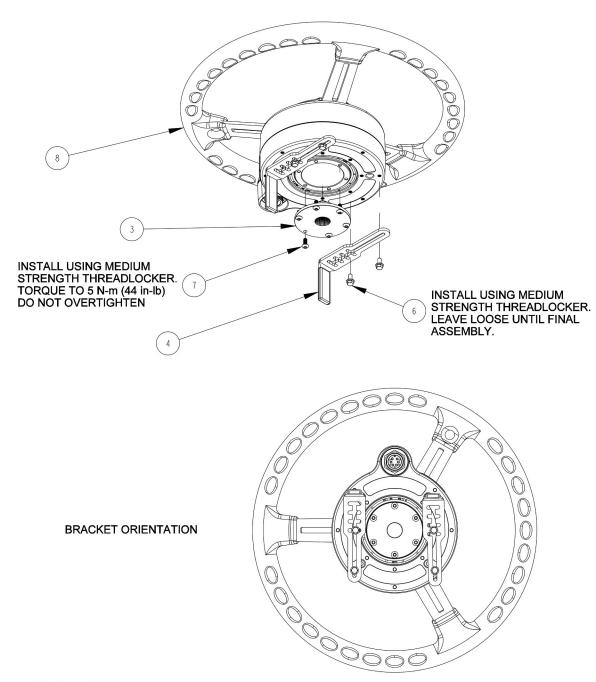

ASSEMBLY INSTRUCTIONS:

- 1. PRE-ASSEMBLE SPLINE ADAPTER AND BRACKETS TO WHEEL MOTOR.
- 2. PLACE ASSEMBLY ON STEERING SHAFT AND RE-INSTALL STEERING SHAFT NUT.
- 3. ADJUST BRACKETS TO FIT SNUG AGAINST THE STEERING COLUMN.
- 4. TIGHTEN SCREWS ATTACHING BRACKETS TO BOTTOM OF MOTOR.
 TORQUE TO 5 N-m (44 in-lb). DO NOT OVERTIGHTEN.
 ENSURE THAT THE ANTI-ROTATION BRACKETS DO NOT CONTACT THE SPLINE ADAPTER.
 ENSURE THAT THE MOTOR DOES NOT MOVE IN RELATION TO THE STEERING COLUMN.
- 5. ASSEMBLE TELESCOPING ACTUATOR COMPONENTS.
- 6. ROTATE THE WHEEL A FULL TURN TO ENSURE THERE IS NO INTERFERENCE BETWEEN THE BRACKETS AND SPLINE ADAPTER, OR ANY MOVING PARTS AND MACHINE CONTROLS.

Versatile Nemesis and Kubota M8 MFWD Tractors

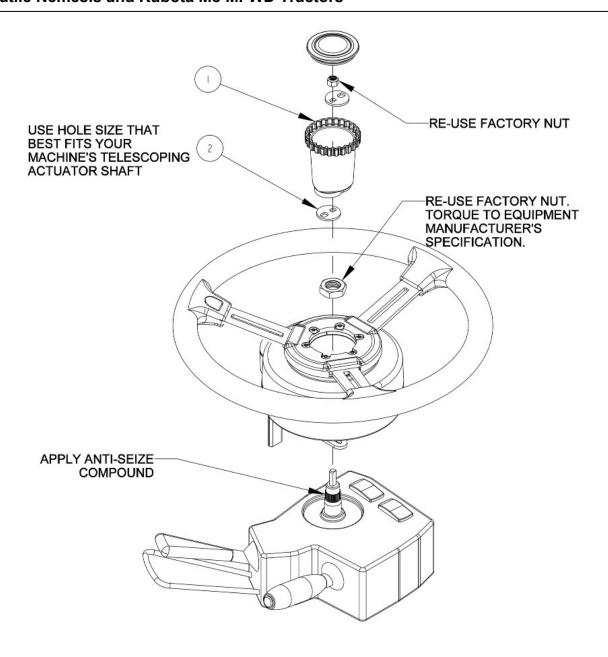

ITEM	QTY	PART NUMBER	DESCRIPTION	NOTES
1	1	600-1486-01	TELESCOPING ACTUATOR KNOB	
2	2	601-1290-01	TELESCOPING ACTUATOR PLATE	
3	1	604-0074-10	SPLINE ADAPTER- ESI2, 36T x .875 MAJOR x .180/.870 OFFSET	
4	2	640-0184-01	ANTI-ROTATION BRACKET	
5	1	675-0126-000	LOCTITE 242 MEDIUM STRENGTH THREADLOCKER	NOT SHOWN
6	4	675-1345-10	SCREW, M5-0.8 X 12MM, HEX FLANGE	
7	6	675-1351-10	SCREW, M5-0.8 X 12MM, BUTTON HEAD	
8	1	910-4024-10	ESI2 ELECTRIC STEERING WHEEL	

Install #8

Versatile Nemesis and Kubota M8 MFWD Tractors

ESi² wheel successfully installed.

Continue to page 54 to complete the installation.





Install Completion Checklist

- Ensure steering wheel turns freely and anti-rotation brackets do not contact the spline adapter.
- Check, and if needed, tighten anti-rotation brackets to eliminate excess movement. Loose anti-rotation brackets can cause poor steering performance.
- For steering ECU installation instructions please refer to the ECU installation guide that came with your installation kit.